

SRT

This device monitors the operation process for potentially hazardous conditions and activate an alarm when it is occurred misalignment, the SRT series conveyor belt misalignment switch protects the conveyor belt from damage due to belt misalignment or run off.

For normal condition, the belt misalignment switches are generally mounted on both sides and the edge of the conveyor belt.




A small clearance between the contact rollers and a little swaying for the belt edges are allowable. When the swaying exceeds the normal limit (on/ about 20 mm), the belt edge pushes the contact roller, which drives the switch and operates the contacts, the misalignment switch will reset automatically when the belt resumes normal running. These control devices are used in pair on each side of conveyor belt detected place, each unit can be equipped with two micro-switches to produce signals indicating the belt misalignment at two deviation points.

The first signal point could indicate small belt deviation by sounding an alarm, the second signal point could guard against extreme belt run off by shutting down the conveyor.

The roller is adjustable up to 20° in both directions and is positioned approximately 20mm from the conveyor belt, the switch actuation points are adjustable from 0° to 35° by a simple change of the actuating cams.

DIMENSION

SRT

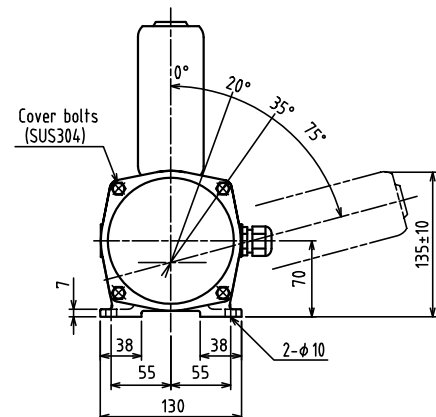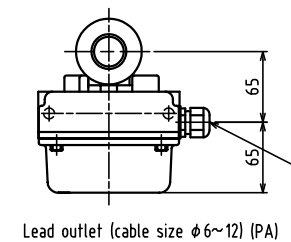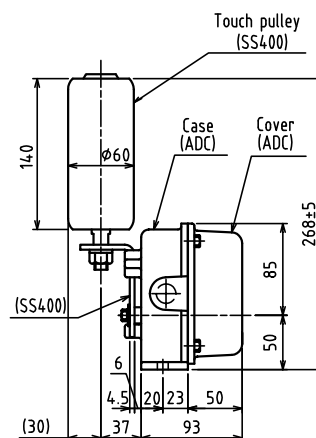

CHARACTERS

- Simple Installation, response sensitive
- Roller arm can move up to 75 degrees in either direction
- Dust tight, IP 67 weatherproof, Die cast aluminum housing
- Roller lever actuating angle 20° for alarm signal and 35° for shutting down system
- To Save Process downtime, product loss and replacing cost of damaged conveyor belt

APPLICATIONS

- Conventional Belt Conveyors
- Underground, Cable Supported Belt Conveyors
- Stacker / Reclaimer Conveyors
- Ship Loading / Unloading Systems
- Tripper and Shuttle Conveyors
- Crane / Shovel Boom Position Limit Detector
- Apron Feeders & Conveyors
- Heavy Duty Limit Switch

SPECIFICATION

Switching Capacity	10A,125/250 Vac 1/2A 125 Vdc SPDTx2
Action Force	3.4~5.4N.m (0.35~0.55kgf.m)
Reset Way	Auto
Ambient Temp.	-20~60°C
Enclosure Protection Grade	IP67
Enclosure Material	Die cast ADC
Weight	Approx. 2.9kg

SAFETY CABLE PULL SWITCH FOR EMERGENCY OR NORMAL SHUT-OFF

SRS

Belt conveyor safety cable pull switches are designed for providing a switching system to isolate the power to conveyor system and other equivalent process equipment in the emergency condition.

The cable pull switches are actuated by a plastic coated steel wire, which are placed along-side the conveyor. When you pull on the cable at any point, it will trip and automatically lock the switches, deenergizing the conveyor starter contactor. Each switch is bi-directional in operation and has two cable fitted to it from opposite directions terminated with a spring at the anchor points, please see drawing 4 the springs will operate the switch on cable breakage.

After tripping the mechanical latch can be released only on the switch itself by the reset lever.


APPLICATIONS

emergency or normal stop for below facilities

- Conventional Belt Conveyors
- Shuttle Conveyors
- Bucket Elevators
- Packaging Lines
- Stockpile/Reclaim systems, Cranes, Shovels, Draglines
- Ship Loading / Unloading System
- Horizontal Feed Systems

DIMENSION

SRS

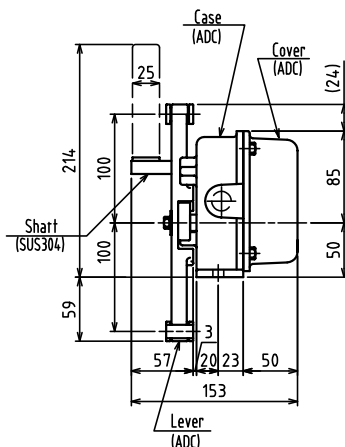


CHARACTERS

- Universal design for bi-direction activation
- Compact design for tight-fit areas, IP67 rugged die cast aluminum housing
- Manual reset lever
- Easily orientated at either end or intermediate position in pull cable run
- Cable Pull 30° for shutting down system
- Highly visible black arm easily shows condition of the switch, indicating alarm or normal

SPECIFICATION

Switching Capacity	10A, 125/250 Vac 1/2A 125 Vdc SPDTx2
Action Force	49 ± 9.8n (5 ± 1kgf.m)
Reset Way	Manual
Ambient Temp.	-20~60°C
Enclosure Protection Grade	IP67
Enclosure Material	Die cast ADC
Weight	Approx. 2.9kg

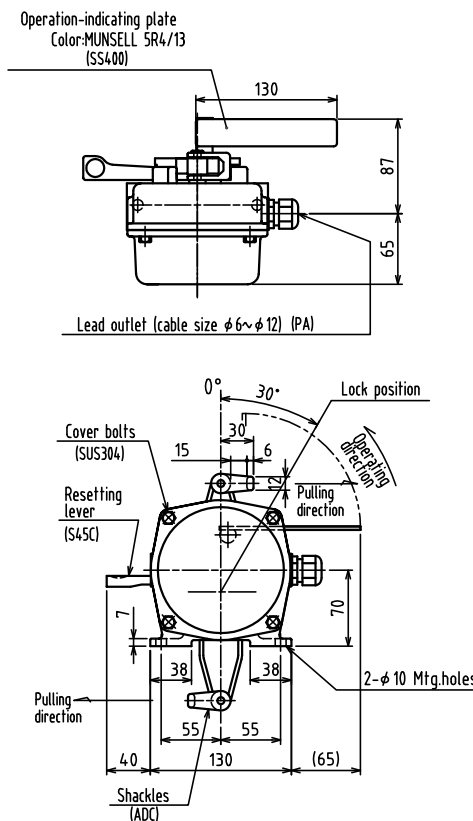

SPEED MONITOR

ED4000

ED4000(SM4) Speed Monitor is a totally new rotational speed monitoring equipment; it uses the principle of photo detector and microprocessor to accurately calculate a wide range of rotational speed. It detects rang 1~999rpm and the rotational speed display on 7-seg led.

There is a contact relay that could be used either for alarm or control purposes during the monitoring process. The alarm set point could be directly set by numerical knobs which is more convenient and more accurate than conventional means. It comes equipped with analog signal output which could be utilized for various display indications and more precise control. Other features include anti-reversal action, which could prevent the wrong power supply connection after maintenance of the motor. It is ideal for applications in monitoring low speed, stop and overload situations.

APPLICATION

- Low speed and overload protection monitoring of various conveyer systems
- Networked circuits to form sequential start or stop
- Frequently used machines: Grain and coal storage vertical conveyer machines and belt conveyer machines

SPECIFICATION

- Measuring Range : 0~999 rpm.
- 7-seg led display 0~999
- Alarm Set point : 1~1999 rpm by rotary switch.
- Rotate Direction : Counter Clock-wise or Clock-wise.
- Alarm Conditions : Underspeed, standstill, reverse, power failure.
- Startup Delay : 0 second or 15 Seconds. Selectable
- Alarm Contact Rating : SPDT 5A/250Vac.
- Alarm Delay : 0, 3, 6, 9,...,27 seconds. Selectable
- Speed Analog Output : 4~20mA
(Signal Range Selectable : 100/200/500/1000rpm).
- Power Supply : 85~265Vac, 50/60Hz
- Power Consumption : 6VA.
- Operating Temperature : -20°C~70°C.
- Housing : Cast Aluminum.
- Protection : IP65
- Cable Entry : 1/2"NPT X 2 hole.


FEATURES

- Maximum monitoring range 1~999rpm.
- 7-seg led display 0~999
- Alarm monitoring: low speed, stop, reverse, blackout and overload.
- Start up delay function allow motor to run up gradually.
- Alarm delay function can avoid fault alarm which many caused by temporary slow down or load changed.
- Selectable rotate direction for both CCW and CW makes installation more versatile.
- Light pulses are not affected by environmental conditions.
- Complementary to FineTek PB/PM series digital Panel meter to indicate speed.

Special Function (built in function)

4~20mA output, proportional to selectable speed range like 100rpm, 200rpm, 500rpm and 1,000rpm.


DIMENSIONS:

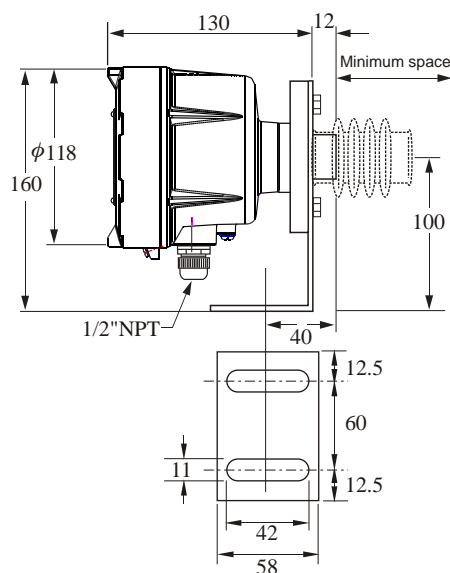


(Unit : mm)

DESCRIPTION OF PANEL

- ① Set point rotary switch
- ② Power & Alarm indicator (Green/Red)
- ③ Reverse Indicator (Orange)
- ④ Start Up Delay Selection Switch
- ⑤ Alarm Delay Selection Switch
- ⑥ 4-20mA output range Selection Switch
- ⑦ Rotary Direction Selection Switch
- ⑧ 7 Segment Indicator

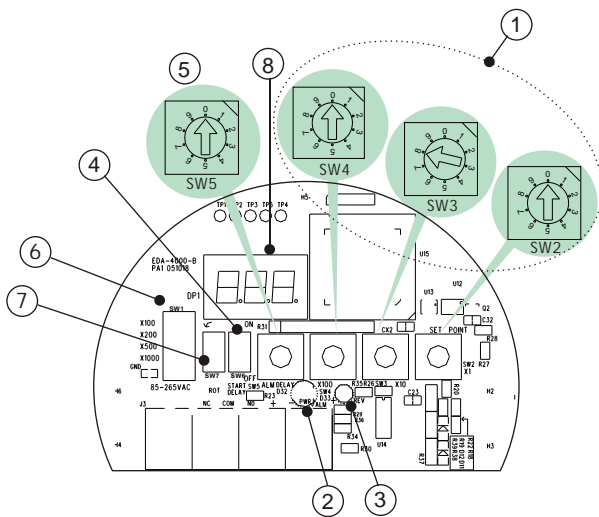

ED TYPICAL APPLICATION

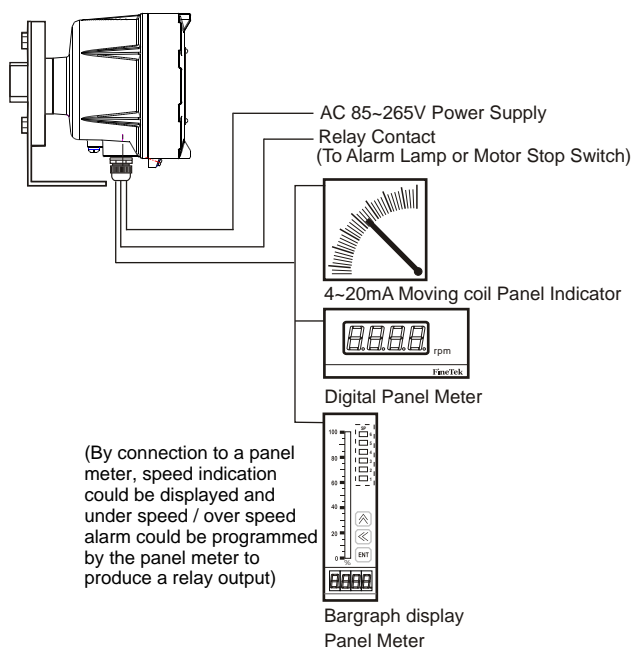

DESCRIPTION OF OPERATION

1. Set point rotary switch

The function of this switch is for setting alarm position. The rotary switch consists of 3 buttons, including x100, x10 and x1. If the setting is at 321rpm, then rotate the SW4 to position 3, rotate the SW3 to position 2 and rotate the SW2 to 1.

2. Alarm indicator (Red)/Power indicator (Green)

1. When the monitor detects the speed lower than the setting point and reach to the alarm delay time or the motor reversed, the alarm relay is actuated and the red light is on spontaneously; vice versa, the red light is off when the speed is rotated back to normal.

2. The function of the green light is to indicate power situation. After switching on the start up delay function and blinking for 15 seconds, the power indicator lights up.

3. Reverse Indicator (Orange)

If the motor is rotating reversely, the reverse indicator lights up; vice versa, the indicator is off while the motor is rotating in right direction.

4. Start Up Delay Selection Switch

The ED4000 monitor can be set to actuate the alarm relay after turning on the power 15 seconds in which the function is to avoid any alarm caused by slow speed at starting up the convey motor. To setting "ON" means to switch on the selection of start up delay, while setting "OFF" means to switch off the function of start up delay.

5. Alarm Delay Selection Switch

This function is to avoid any misreading and actuate the alarm relay due to unequal speed. The setting method is to rotate SW5 to required delay time in which the rotary position and time can refer to below parameter table.

According to the table, if rotate to "position 5", the delay time is 15 seconds for actuating the alarm relay.

Rotary position	0	1	2	3	4	5	6	7	8	9
Delay time	0 sec	3 sec	6 sec	9 sec	12 sec	15 sec	18 sec	12 sec	24 sec	27 sec

6. 4-20mA output range Selection Switch

This switch is to convert the detected speed into proportional current output. There are four selections which are 100rpm, 200rpm, 500rpm, 1000rpm. If setting at 500rpm, then the input speed of 0~500 rpm will be converted to 4~20mA output. For example, if the detected speed is at 250rpm, then the current output is 12mA.

6. Rotary Direction Selection Switch

Ed4000 speed monitor can be set to rotate either clockwise or counterclockwise. If setting at ↻, the monitor is rotating clockwise, while setting at ↺, the monitor is rotating counterclockwise.

MULTI-FUNCTION TEMPERATURE AND SPEED SAFETY METER

TS-5350



Multi-function temperature and speed safety meter is designed to detect and surveillance bearing temperature and pulley speed of conveyor and hopper type lifter. It offers functions as alarm and shut-down signaling under unusual condition, and measuring recording. Users will have better knowledge in equipment condition and degree of depreciation, which enriches field workers safety and equipment creditability.

FEATURES

- Easy installation and operation.
- 128 x 64 blue LCD display.
- Key pad lock with password to avoid unexpected dialing.
- Delay start.
- Overload delay.
- 4 sets of bearing temperature and 1 set of pulley speed detection.
- Auto surveillance for equipment alarm and shut-down under unusual condition.
- Full record of bearing temperature and pulley speed.
- Historical record check-up prior to equipment shut-down under unusual condition.
- RS-485-Modbus communication interface.
- 1 set of external reset switch input
- 2 sets of external general switch input

APPLICATIONS

Applications on conveyors in mining, cement, power plant, steel making, harbor, chemical process, food process, pellet, mill, and feeding process.

- Conveyers and conveyer belts
- Ferry loading system
- Crane


SPECIFICATION

Size (mm) 96 (W) x96 (H) x120 (D) DIN 1/4


Model			TS
Power Input			85~265Vac, 45~65Hz
Power Output			DC 24V/70mA
Power Consumption			Max. 10W
Operation Temperature			0~65°C
Operation Humidity			45~85% RH
Storing Temperature			-25~75°C
Indication			128x64Pixel LCM LED
Signal Input	Speed	Input	Voltage Input (NPN) High : 4~24Vdc Low : 0~2Vdc
		Range	10 ~ 999,999 pulses/min
		Resolution	±1 pulse/min
	Temperature	Set	4 sets
		Type	PT100, 3 wires
		Range	0~150°C
		Accuracy	±1%
	Resolution		±0.1°C
		Digital Input	Reset Switch
	General Switch		Voltage Input (NPN) High : 4~24Vdc Low : 0~2Vdc
Relay	Set	2 sets	
	Power Rating	SPDT 5A/250Vac or 5A/30Vdc	
Communication Interface			RS485
Communication Protocol			Modbus
Transmission Speed			1200~57600bps
IP protection			IP65
Exterior Dimension			96x96x113

※Digital Input 2 channel


EXTERIOR (Unit : mm)

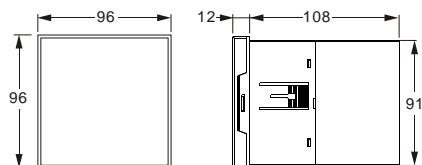

CUTOUT DIMENSION (Unit : mm)

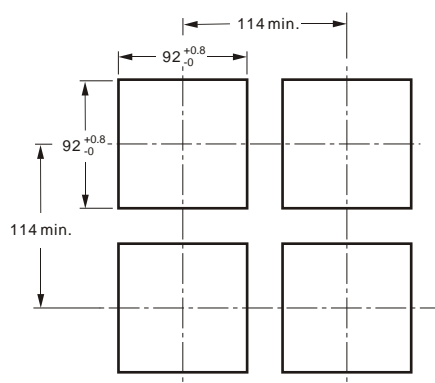

TERMINAL ARRANGEMENTS

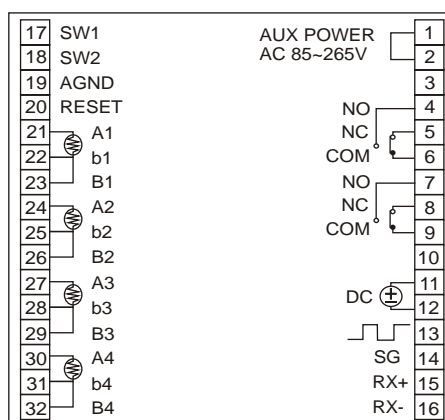


	Category	Terminal No.	Description
Input	Pulse	13	Voltage Input (NPN)
	Temperature	21~32	4 sets, 3 wires
	Reset Switch	19,20	Voltage Input or switch input
	General Switch	17, 18,19	
Output	VDC	11,12	24Vdc, max 70mA
	RL1	4,5,6	SPDT 5A@250Vac Alarm
	RL2	7,8,9	SPDT 5A@250Vac Shut off
Power	VAC	1,2	85~265 Vac @ 50/60Hz
Comm.	RS485	14,15,16	ModBus

ORDERING INFORMATION

TS-5350-S ☐ ☐

Pulse Output	0---Non 1---with pulse output	
Communication Interface	0---Non 1---RS485	

DISPLAY PANEL DESCRIPTION

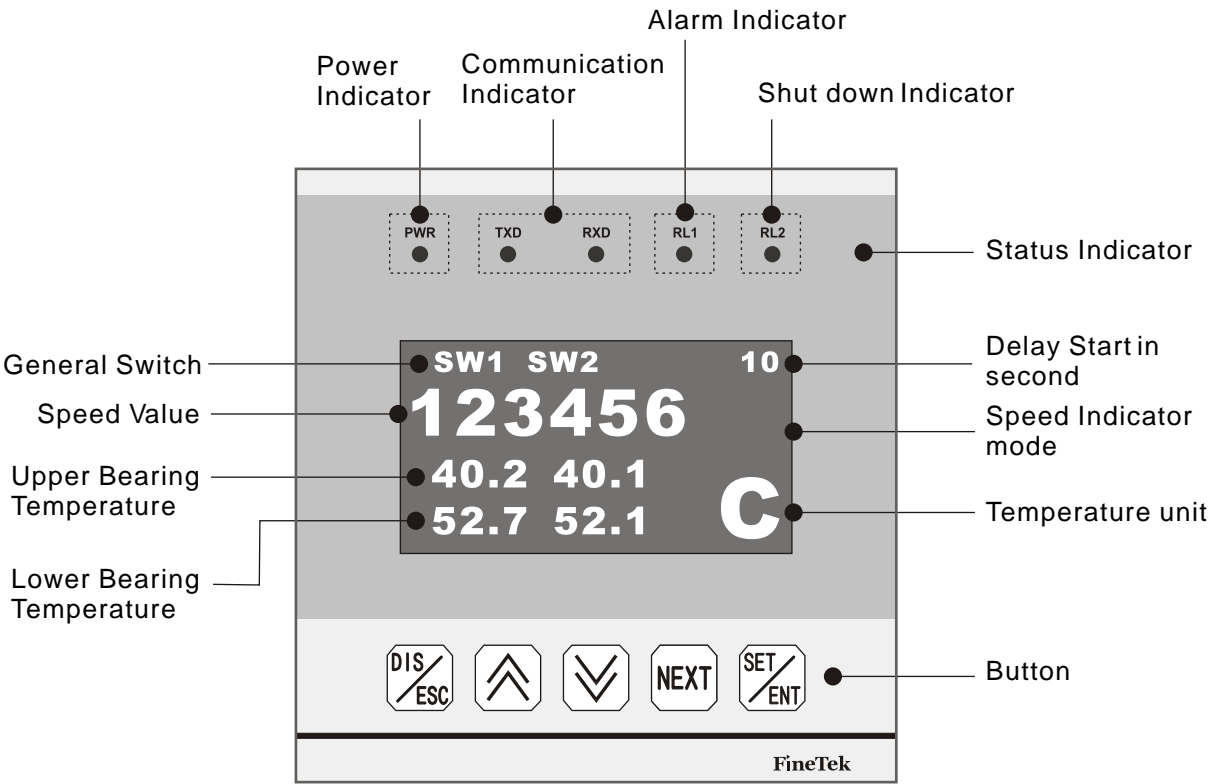

Button	Display Mode	Setting Mode
DIS/ESC	Auto-back current data screen or manual reset(hold button for 1 second)	Auto-back display mode or cancel/return
⬆	Temperature C/F exchange indication	Scroll up/Value increase
⬇	Speed % exchange indication	Scroll down/Value decrease
NEXT	Screen exchange	Screen Exchange
SET/ENT	Set mode	Set/confirm
RESET	Manual reset	Manual reset